



SQUARE
PERFECT

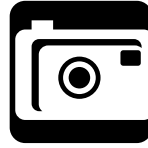

Make every picture perfect

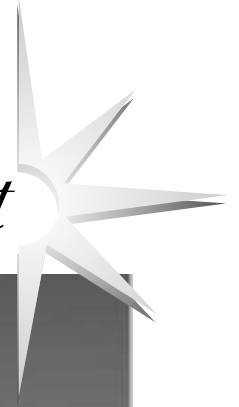

**SP3700 VARIABLE POWER
STUDIO FLASH SET**



SP3700 Professional Series Studio Light Kit

- A** Qty. 2 SP150S Professional Studio Strobes (150 Watt-Seconds) 100-watt modeling light.
- B** Qty. 1 Fill Flash (45-watt/second) with light stand.
- C** Qty. 2 Light Stands (extends 39" to 6'1/2")
- D** Qty. 2 Softbox (20" X 28")
- E** Qty. 1 Umbrella (33" gold reflection umbrella)
- F** Qty. 1 Carry Bag (Carries strobes, light stands, umbrella and accessories)
- G** Qty. 1 Backdrop stand with carry bag
- H** Qty. 1 10'x20' Backdrop
- I** Qty. 2 10'x13' Black and 10'x13' White backdrop

Accessories:

- J** Qty. 1 Wireless strobe trigger system.
- K** Qty. 1 Collapsible Reflector (32" double sided - Silver/White)
- L** Qty. 1 Four Leaf Barndoor
- M** Qty. 1 Set of 4 Color Gels
- N** Qty. 1 Honeycomb Diffusion Filter
- O** Qty. 1 Narrow Snoot
- P** Qty. 1 Various sync cords to match camera systems.

SQUARE
PERFECT

Make every picture perfect

www.squareperfect.com



SP3700 Flash Studio Kit

Thank you for your purchase of the SP3700 Flash Softbox Studio kit. This manual has been written to help you with the assembly, operating procedures and accessories. Square Perfect's SP3700 Flash Kit is manufactured with the finest material available. Your flash kit will provide many years of quality service with proper care and handling.

Please read this manual carefully before use, and keep it handy for use during break down of equipment. Please read and heed all safety precautions listed in this manual. To order spare bulbs or replacement parts, contact us at info@squareperfect.com. Also check out our extended line of photo equipment now available.

Flash Studio Kit Includes:



Nylon Carry Case. Compartmentalized for easy use



1x2 SP200 lamp body. 12' power cord.




1x2 SP803 professional duty adjustable light stand. Stand extends from 5' to 14'.
1x1 Small stand for highlight/fill strobe flash



Electronic radio trigger/receiver with sync cord and adaptors.



1x2 Four panel softbox set. with lamp connector.

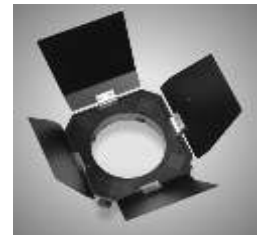

1 Four leaf barndoor.



1x1 Highlight/Fill strobe lamp body. 6' power cord.



1 set Red, blue, yellow frosted and honeycomb filter.


1x1 Flat reflector for creative fill techniques, includes carry case.



1x1 Snoot will direct light to exact spot without affecting surrounding area.



1x1 Umbrella - double layered reflective inside, light proof backing.

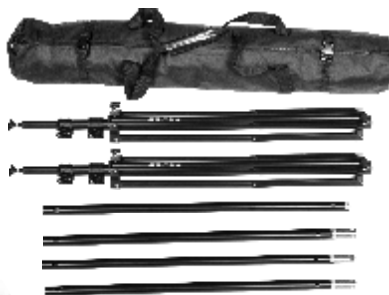

1x1 Complete backdrop stand with carry case



1x1 Varigated dye backdrop
1x1 Black backdrop
1x1 White backdrop



Technical notes for use:



Four leaf barndoor set with color filter attached to the flash head.




Remove protective cover from mounting tip before attempting to place flash head on stand.



1. Swivel screw.
2. Umbrella rod mount.
3. Mounting screw

SP150S Lamp Head Operation:

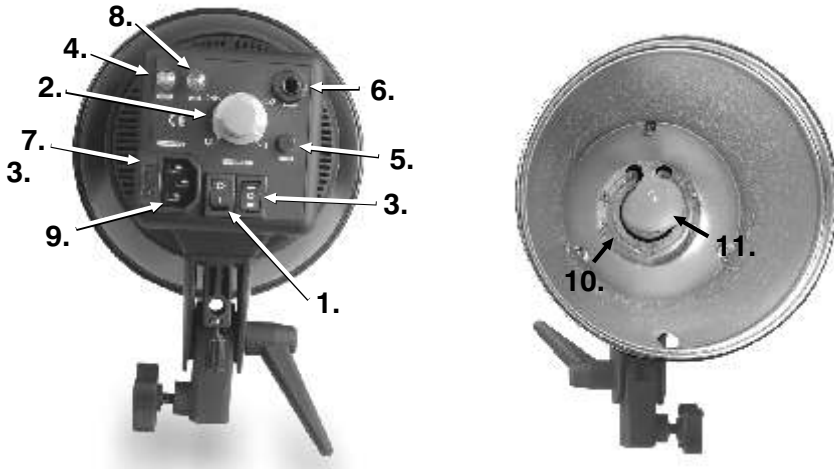

- | | | |
|---------------------------------|---------------------|-------------------|
| 1. On/Off electric supply. | 5. Flash test. | 9. AC receptacle. |
| 2. Variable flash dial. | 6. Sync receptacle. | 10. Flash ring. |
| 3. On/Off variable, model lamp. | 7. Safety fuse. | 11. Model lamp. |
| 4. Flash ready light. | 8. Slave dome. | |

Specifications:

Power Input : AC110-130 volt, 60 Hz
 Flash Power : 150w (joule) in full
 Guide No. : GN32
 Color Temperature : 5600K
 Flash-Tube Lifetime : over 8,000 typical flashing
 Flash Power Setting : 1/8 to full
 Recharge Time : 2 seconds in full
 Flash Duration : 1/600 sec.; 1/1000 sec.
 Slave Range : 35ft /10m
 Lighting Range : 55 degree
 Modeling Power : Halogen 100w
 Synch Voltage : 5 volt
 Fuse : 6A
 Dimension : 4" x 7-1/2"
 Weight : 1.8 Lb (800g)

SAFETY PRECAUTIONS:

- Become thoroughly familiar with this product before use. Run through at least one practice assembly and breakdown before you schedule a shoot.
- Make sure that the main voltage corresponds to that stated on the SP lamp. Account for number of lamps in use.
- Never leave the lighting unsupervised when in use. Keep children or incompetent persons away from lighting equipment.
- If the lamp or the cord show sign of wear or damage, it should be replaced or repaired by a qualified electrician before use.
- Wait until the bulb is completely cool before touching or removing it.
- Never use the SP lamp outside in a wet environment.
- Never move the appliance by pulling the cord. Make sure the cords do not come in contact with halogen bulb. Do not wind the cord around the appliance.
- Stand the SP on a flat surface only to prevent toppling.
- Do not touch the metal parts on the lamp while in use, these metal parts will become very hot.

Softbox Assembly:



1. Pictured is the SP4" lamp ring connector shown with the large end of the flex rod inserted.



2. Small end of flex rod fits into corner pocket on the softbox tent.



3. With three rods inserted into the ring and corners, fold the SP 4" ring into the tent.



4. Next insert the fourth rod into the SP 4" ring. *Note:* Keep the velcro flaps at the ring open to allow sufficient slack.



5. Insert the fourth rod into the pocket on the velcro strap.



6. Push the velcro strap into place just below the lip of the tent. *Note:* the rods take a good deal of force to flex into position.



7. Now close the velcro flaps as shown in the picture.



8. The SP 4" ring can now be attached to the SP 160 flash unit. *DO NOT* over tighten.



9. Next attach the inner diffusion lens with the velcro straps.



10. Attach the outer diffusion lens to velcro patches on the outer edges.

Technical Notes for the electronic radio trigger device:

The SP3700 Flash Kit is shipped with the DRT-2G electronic radio flash triggering device for your convenience.

It is an easy to use device that will give you extra control in the photographic studio environment. The DRT-2G is designed to work with a variety of flash

units. We provide a wide range of sync cord adaptors to fit most popular brands.

The DRT-2G trigger has two channels and uses a 23A battery (installed). The DRT-2G receiver uses two AAA batteries (not included).

1. To use the DRT-2G trigger device, first slide the trigger into the hot shoe found on top on your camera. If a hot shoe is not available, use the sync cord attachment found on the side of the trigger device.



2. Attach the receiver to a remote flash unit. Use the proper sync cord adaptor provided, plug into sync cord socket.

3. Switch the receiver unit ON/OFF button to the ON position. Press the test button located on the top of the trigger unit. You will see a twinkling of the LED on the receiver unit. This indicates the trigger is working properly and is locked-in on a working channel of the receiver.



4. Switch the remote flash unit power switch to the ON position with the DRT-2G receiver attached. Push the test button on the DRT-2G trigger; it should trigger the remote flash unit.

5. To change channels on the DRT-2G trigger, slide the channel switch on the side of the trigger device to the opposite position. Next press the power switch on the receive unit twice to reset the receiver.

To order spare bulbs or replacement parts, contact us at info@squareperfect.com. Also check out our extended line of photo equipment.



www.squareperfect.com