



Make every picture perfect



SP Photo Cube
Folding instructions
Large and Small

www.squareperfect.com

Large Photo Cube



1. Stand behind the tent.



2. Fold the top of the tent down and tuck front edge into the bottom corner.



3. Pull the front bottom edge up to the back top edge.



4. Grasp the outside edges of the folded tent.



5. Fold the outer edges together forming a half.



6. With one hand, hold the two edges and grasp the half loop with your free hand.



7. Tuck the half loop into the center.



8. Twist the new formed loops and fold into a flat package.



9. Your tent is now folded in a flat package.



10. The folded tent will easily fit into the storage case.



11. Done! Approximate folding time 30 seconds.

Small Photo Cube




1. Work from behind the tent.



2. Fold the top of the tent down.



3. Tuck the front top edge into the bottom rear.

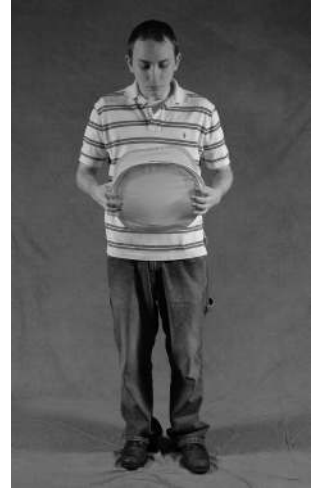

4. Grasp the outside edges of the folded tent.



5. Fold the back panel down together forming a flat package.



6. Slide the flattened tent into the storage bag.



7. Down! Approximate fold time 10 seconds.